


Fixed Sash Fixing Clip Set Instructions

The fixed sash fixing clip set is ideal for timber windows. It allows for quick and simple fitting of dummy sashes into window frames.

The set comprises of a frame assembly and sash assembly that inter-lock when fitted.

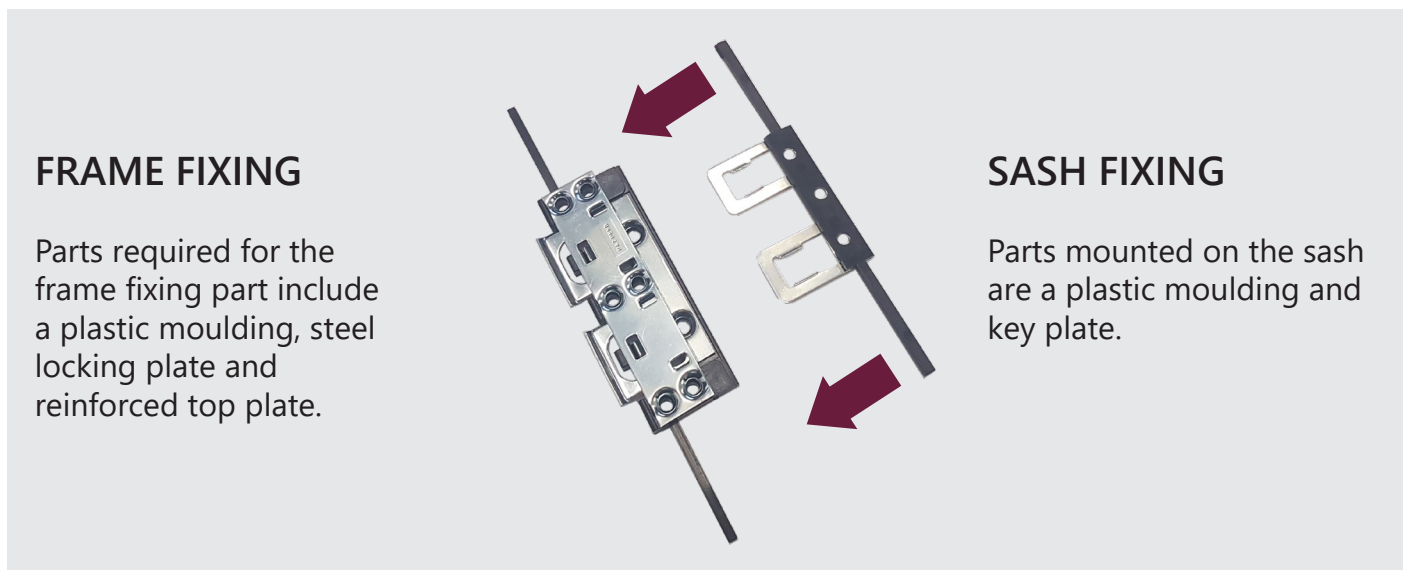


Assembly into frame is quick and allows for factory glazed sashes to be fitted on site, which greatly reduces fitting time.


The operation of removing the sash when required is simplified by the release tool on the inside of the frame/sash as shown in the section drawings below.

A built in 12mm difference in sash rod to frame rods ensures that location is achieved every time. 4x fixed sash fixing clip sets are required per sash.


Releasing the Fixed Sash

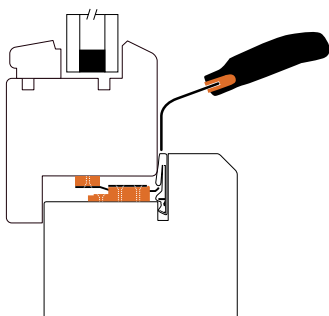

1. Place sash release tool between the sash and the frame from the internal side of the window.

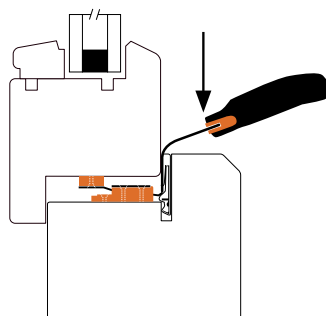

2. Push the sash tool down onto the fixed sash fixing clip.

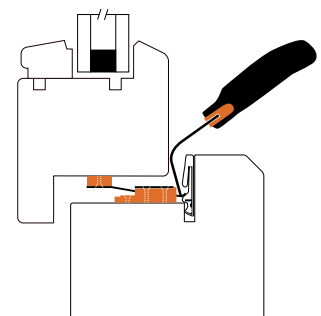

2. Push the sash tool down onto the fixed sash fixing clip.