
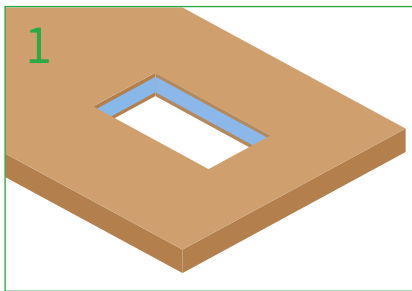


Timber composite decorative moulding for use on both exterior and interior door panels.


Required Profile:

**QW-DGB1**  
**QW-DGB2**  
**QW-DGB3**


Door glazing bead

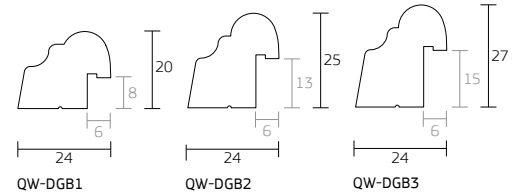


1 Cut out door panel to be glazed.

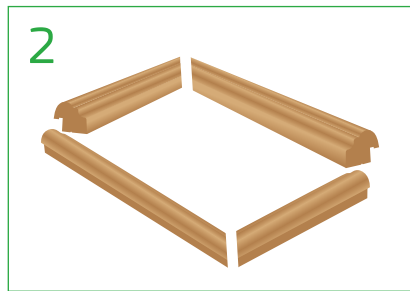

2 Measure and mitre cut the bead to suit the panel cut out.

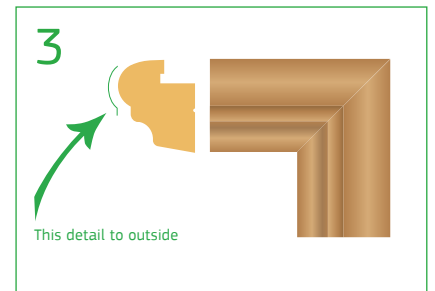


3 Ensure the correct orientation of the bead as shown above.

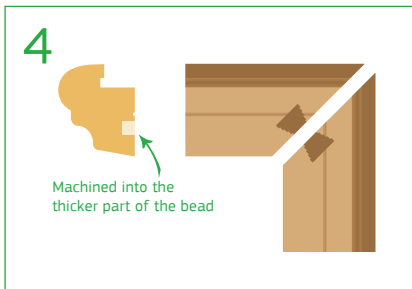


4 Machine butterfly/dove tail grooves.




5 Join the pieces with butterfly joints to create the full cassette. (Hoffman W2, 6mm)

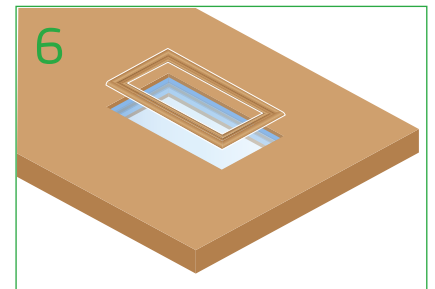

6 Apply high strength, waterproof timber adhesive to door groove and/or base of cassette, subject to adhesive manufacturers recommendations. Assemble cassette into door groove, apply pressure and allow to cure. Use panel pin fixings for added security.

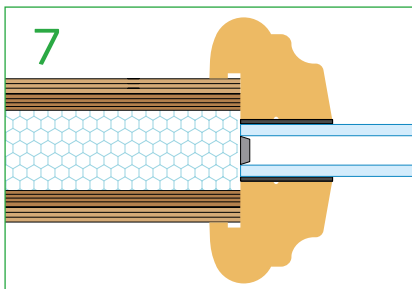

7 Final assembly with security glazing tape applied.

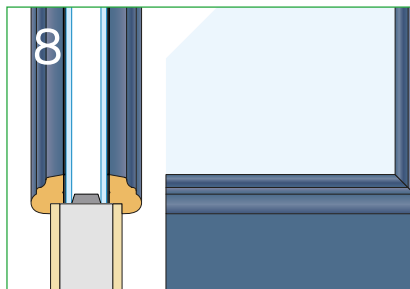

8 Remove excess adhesive and prepare for paint. Apply paint finish to the paint manufacturers recommendations.

If you require any further information or assistance with the fitting of any Qwood product, please contact us:


**+44 (0) 161 627 4222**

**info@qwood.co.uk**

**www.qwood.co.uk**

Matching glazing and bolection mould.

SCALE: 1:1

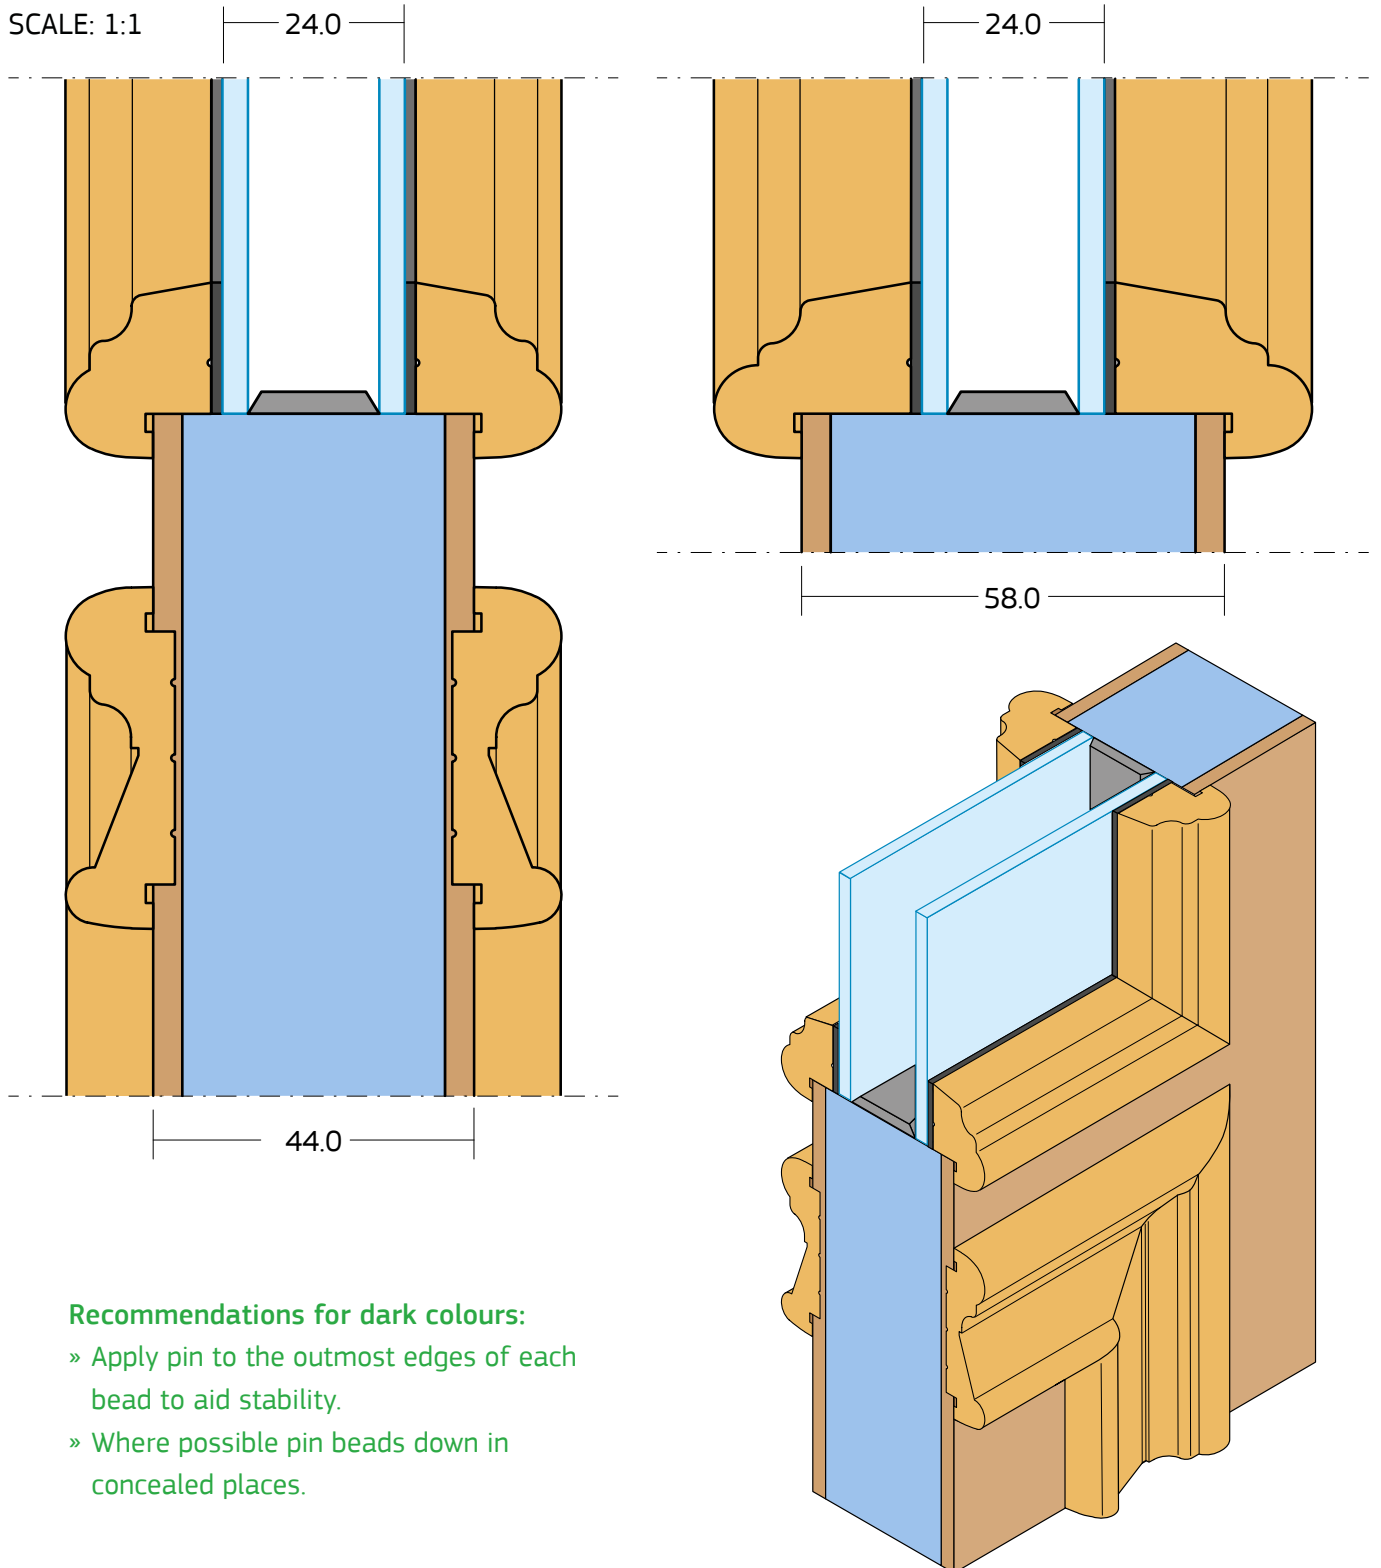

**Recommendations for dark colours:**

- » Apply pin to the outmost edges of each bead to aid stability.
- » Where possible pin beads down in concealed places.

If you require any further information or assistance with the fitting of any Qwood product, please contact us:

+44 (0) 161 627 4222

info@qwood.co.uk

www.qwood.co.uk